





CONTEMPORARY PD LOFT HATCH

PROVIDED

30mm Steel
Screws





Futher Required Tools

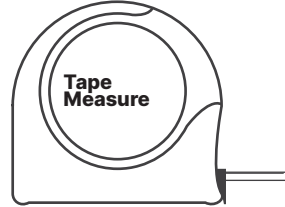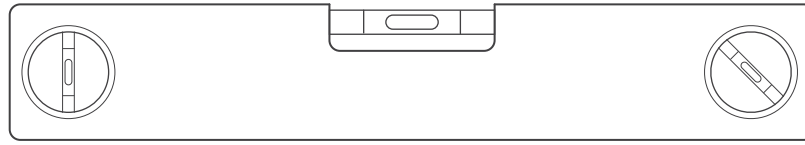


1

Form a suitable opening in the ceiling and between the joists, with minimum dimensions of 562 × 642mm.

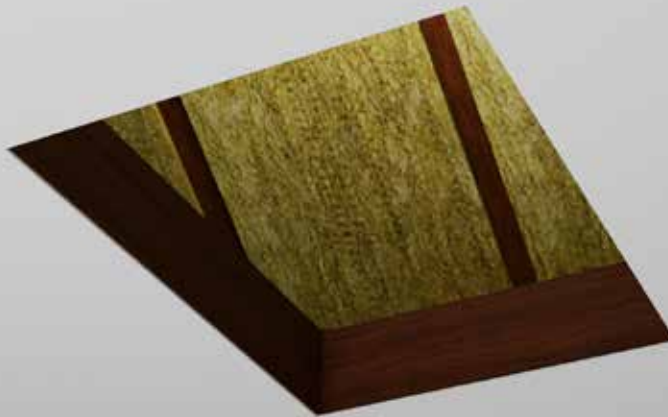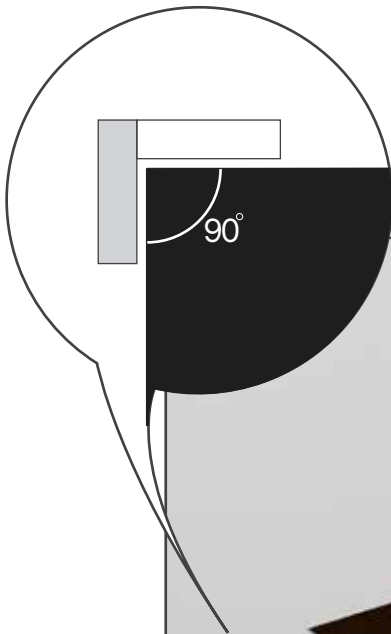


2

Open the hatch 90° and locate the frame into the prepared structural opening.

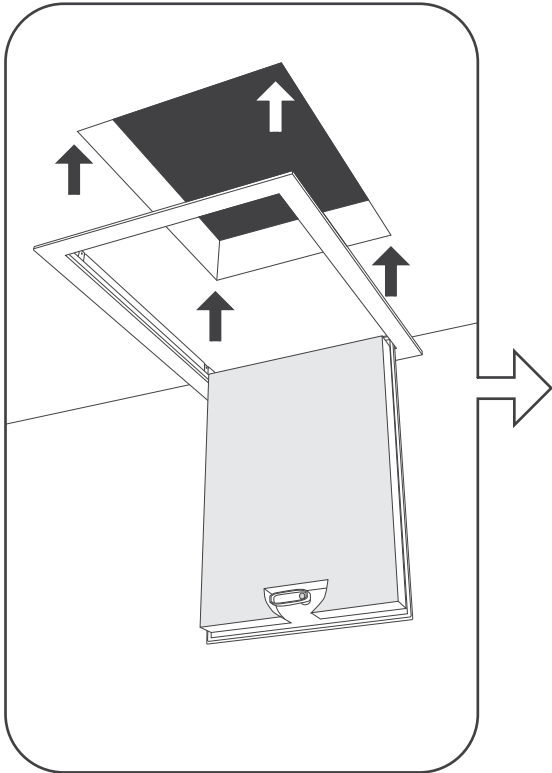**3**


Push the frame tightly against the ceiling to engage the seals between the frame and the ceiling.

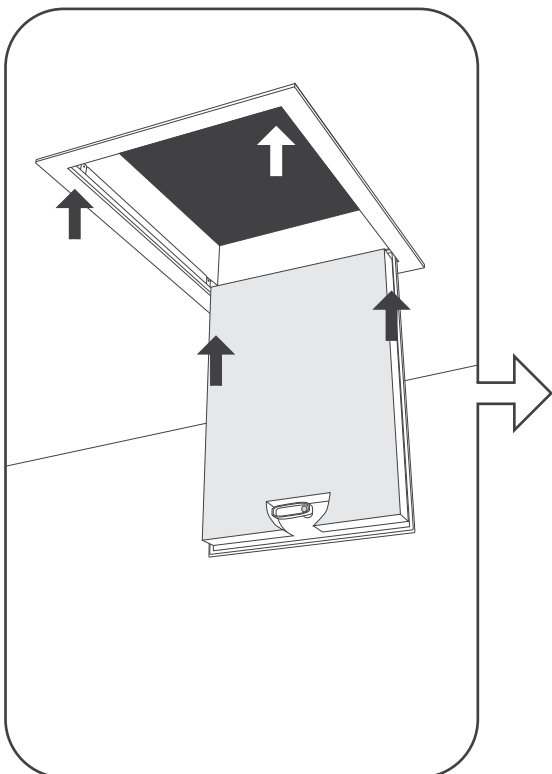

4

Fix the frame on the longer side using the 40mm screws through the pre-molded holes (avoid over-tightening).

Once secured, attach the remaining screws on the shorter side.

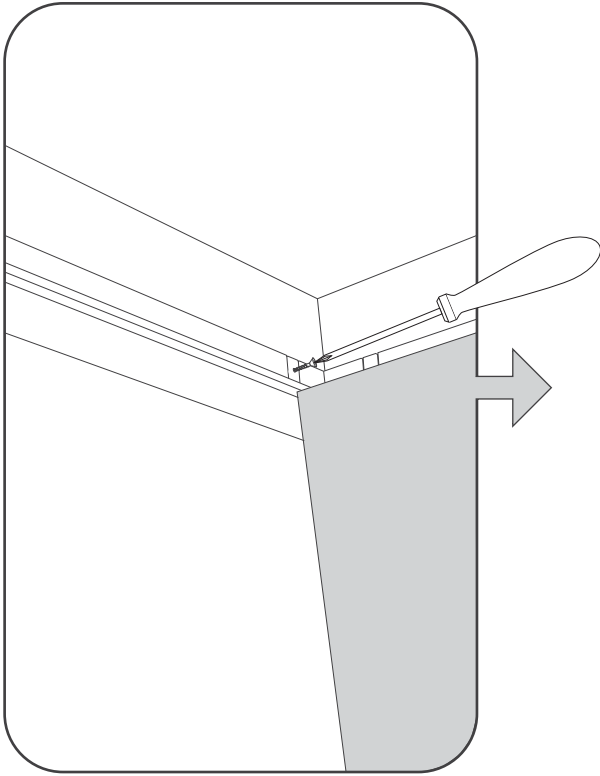**5**

Secure the hatch door by turning the thumb catch system.

